

dCS Rossini Player / DAC Menu Guide

The STEP > button moves along the menu, the STEP < button moves back. Press the MENU button to set a menu option or change options.

